

## 034Motorsport MQB Insuction Bundle

**034 MOTOR SPORT**

034Motorsport's MQB Insuction Bundle is the new standard in performance. This kit was engineered with performance in mind. Manufactured from powder coated aluminum and reinforced silicone; for high flow, strength, light weight, and long lasting reliability. The high-flow, double-layered cotton filter can trap particles as small as 5 microns and has superior filtration over the factory paper filter.

## Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport MQB Insuction Bundle is a straightforward process that will take approximately 30 minutes to complete.

### Supplied Parts:

- 034Motorsport Turbo Inlet
- M8 socket head cap screw
- 034Motorsport Turbo Inlet Hose
- (2) hose clamps
- 034Motorsport Performance Panel Air Filter

### Tools Needed:

- 7mm socket
- 8mm socket
- Hose clamp pliers
- T25 Torx
- T30 Torx
- Phillips head screwdriver
- 6mm Allen wrench
- Two hands, and most of your fingers

## About This Guide

This Install Guide documents the installation process on a 2015 Audi S3, a 2015 and a 2018 VW Golf GTI. There may be minor differences with other vehicles, depending on specific vehicle, market, options, etc.

## Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.

## Step 1

### Open Hood




## Step 2

Using a Phillips head screwdriver, or appropriate socket, loosen the hose clamp holding the intake to the turbo inlet.



## Step 3

Remove the breather hose from the left side of the airbox.

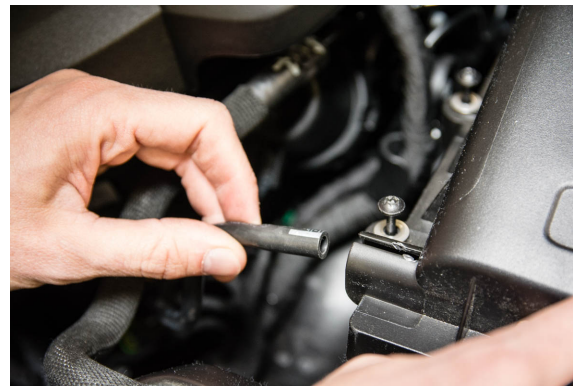

## Step 3A

For Golf, GTI, and A3 owners, disconnect the SAI connector on the side of the airbox.



## Step 4

Using a T25 Torx, remove the upper airbox screws.



## Step 5

Remove the upper airbox and stock air filter.



## Step 6

Using a T30 Torx, remove the screw holding the stock turbo inlet.




## Step 7

Take a hold of the turbo inlet, and turn clockwise to disengage from turbo.



## Step 8

Disconnect breather hose from inlet. It will be either a pinch type connector, or a friction snap-on. The pinch connector is easy to remove, while the friction snap-on will require effort; pulling while simultaneously rocking the connector is usually the best way to remove.

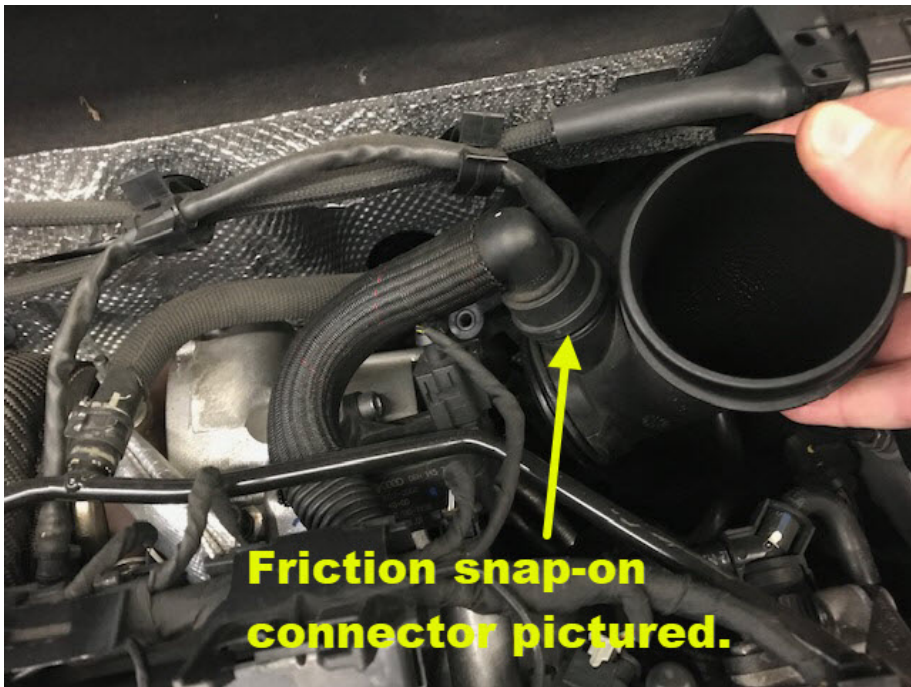

## Step 9

Apply a small amount of Blue Loctite to the supplied M8 socket head cap screw.



## Step 10


Install the 034Motorsport Turbo Inlet. Connect the breather hose (it will click in).

Torque the M8 socket head cap screw to 9NM (6.5 ft-lbs).



## Step 11

Install the Performance Drop-In Air Filter.

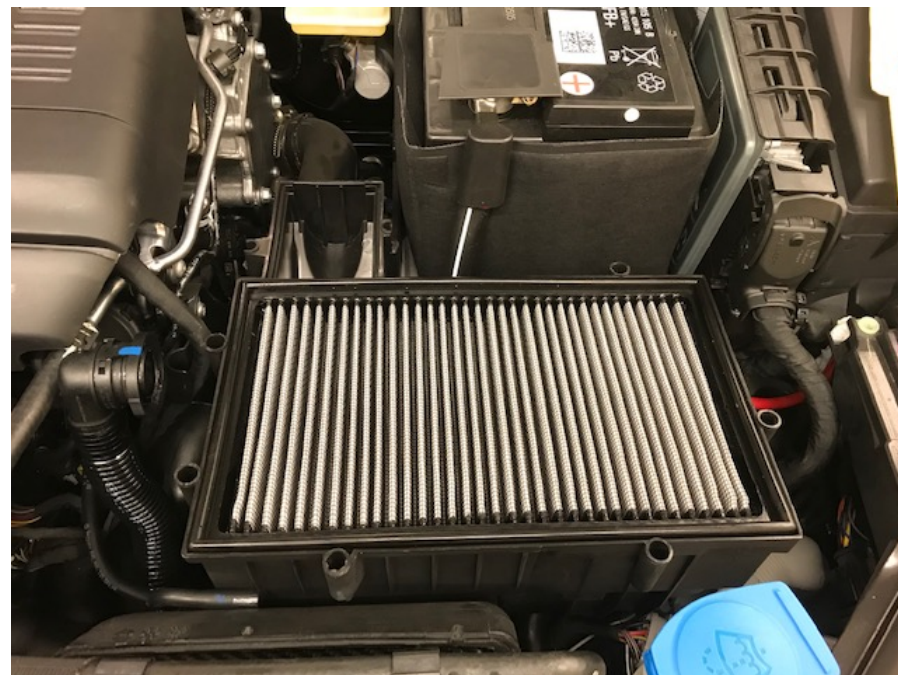

## Step 12

Using hose clamp pliers (regular pliers can also work), remove stock intake tube from upper airbox.



## Step 13

Re-install the upper airbox. Reconnecting the breather hose (Step 3), and if applicable, the CAI hose (Step 3a).


Torque the T25 Torx screws to 4NM.





## Step 14

Install the 034Motorsport Turbo Inlet Hose. Using an 8mm socket, tighten both hose clamps to 4 **in/lbs.**

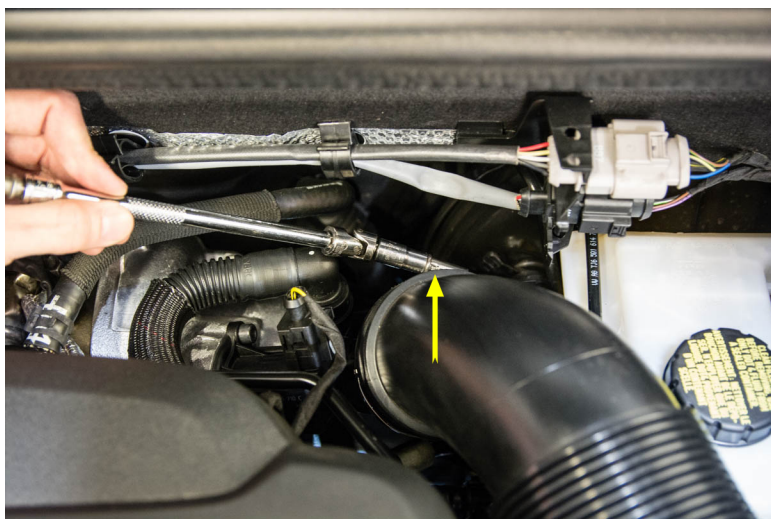

## Step 15

Reinstall engine cover.



## Step 16

Close the hood, and enjoy the performance of the 034Motorsport MQB Insuction Bundle!